

Uninstalling Heller oven software (HC1 controller) for upgrade (on Windows 98)

BACKUP FILES AND SETUP PARAMETERS

From the desktop double left mouse click on the System Setup Wizard icon OR Start -> Programs -> Heller Workstation -> Heller System Setup Wizard. Write down all the setup parameters from all the pages of the setup program.

Using Windows Explorer backup all existing recipes from C:/HELLER/RECIPE folder to a floppy disk or a temporary folder. (Generate a folder named Heller temp)

UNINSTALL HELLER OPERATING SOFTWARE

From the task bar left mouse click START, then SETTINGS, then CONTROL PANEL.

Double left mouse click on ADD/REMOVE Programs.

From the list select "Heller Workstation" and left mouse click on the ADD/REMOVE button.

On the conformation message window left mouse click "YES".

On remove shared file window left mouse click "YES to ALL". Then left mouse click "YES".

After uninstall is complete left mouse click on the OK button.

Using Windows Explorer delete C:\HELLER folder. Right mouse click on the folder then choose Delete.

Using Windows Explorer delete three files in the C:\WINDOWS\SYSTEM directory if they are still present after uninstalling the Heller operating system. Heller Comm.ocx, Win\_Hdac.dll, and Iodatabs.vxd. Right click on the files then choose Delete.

CONFIRM OPERATION OF WINDOWS 98 OPERATING SYSTEM

Heller operating software is completely uninstalled. Restart the computer. After restart a message box with "Problem with Shortcut" may appear because both WinKic and Heller programs are in the startup menu.